CAROUSEL PROCEDURES

Bertazzon Carousel Non kiddie

GENERAL INFORMATION

Each horse is designed to accommodate one rider; gondola seats are designed to accommodate two adults or three children; and spinners are designed to accommodate either four adults or four children.

A normal ride cycle is three minutes.

RESTRICTIONS

Children under three may not ride the spinner unless they are accompanied by a responsible adult.

No smoking, or food or beverage is allowed on the carousel.

OPENING PROCEDURES

Complete opening inspection or make sure that it has been completed.

Check to see that the ride and ride area are clean.

Test run the carousel prior to opening.

OPERATING PROCEDURES

Everyone MUST have a ticket. (Exception: An adult may accompany a small child free of charge.) Greet each guest with a SMILE and THANK YOU!!

Assist all small children on horses and secure them with the safety strap. (Instruct adults accompanying small children to stand on the INSIDE of the outside row of horses.) Offer assistance to other guests as needed.

If the spinner is chosen, assist guests on and secure small children with a safety belt and secure the gate or safety chain.

Make sure the entrance and exit gates or safety chains are closed.

Walk around the entire ride and make sure everyone is seated properly.

If you are not operating the controls give the "go ahead" signal to the operator.

If you are operating the ride go to the control panel and ring the warning bell. Make a visual check to make sure the ride area is clear and start the ride.

While the carousel is in operation your attention should be focused on the ride and guests to make sure no one is changing seats or horses, walking around, etc.

At the end of the ride cycle, as the ride is slowing down, inform guests in the spinners to stop spinning.

When the ride has stopped, open the exit and assist guests from the spinners, horses, etc. Remember to SMILE and say THANK YOU!!

After the last guest has exited, close the exit and begin the loading process over again.

CLOSING PROCEDURES

Turn off the control panel and secure the key.

Sweep and dust mop the entire ride. Wet mop as needed.

Clean chrome.

Dust as needed.

Clean all horses, spinners, and gondolas as needed.

Sweep and clean the area around the carousel.

(Once a week the entire ride should be thoroughly cleaned and wet mopped.)

Turn off the carousel lights.

EMERGENCY PROCEDURES

If an emergency should arise such as a mechanical failure, a guest falling, someone entering the ride area while the carousel is in operation, etc., the carousel can be brought to a safe stop by pushing the RED emergency stop button on the control panel.

(Rev. 11/91)